INSTALLATION GUIDE NI-Serial for PCMCIA

This guide includes instructions for installing your PCMCIA serial hardware and software.

PCMCIA Serial Installation for Windows 2000/XP

Refer to the *Serial Hardware and Software for Windows Help* (available on the CD) for more information about troubleshooting problems, configuring the hardware and software, programming requirements, and more.

- 1. Log on as Administrator or as a user with administrator privileges.
- 2. Insert the NI-Serial Software for Windows 2000/XP CD.
- If the NI-Serial autorun application starts, select Install Software, follow the
 onscreen instructions and skip to step 5. Otherwise, select Start»Settings»
 Control Panel and then double-click Add/Remove Programs.
- Click Add New Programs, CD or Floppy, and Next. When the Run Installation Program window appears, click Finish and follow the onscreen instructions.
- Insert your NI-Serial PCMCIA hardware.



- The Found New Hardware Wizard appears. Complete the wizard by clicking Next or Continue Anyway in each window and then Finish.
- Select Start»Programs»National Instruments»NI-Serial» Troubleshooting Wizard.
- The Troubleshooting Wizard window appears. This application verifies the software and hardware installation and sequentially tests each NI serial port.
- 9. Connect the cables.

PCMCIA Serial Installation for Windows Me/9x

Refer to the Serial Hardware and Software for Windows User Manual (available on the CD) for more information about troubleshooting problems, configuring the hardware and software, programming requirements, and more.

- 1. Insert the NI-Serial Software for Windows NT/Me/9x CD.
- If the NI-Serial setup starts automatically, follow the onscreen instructions and skip to step 4. Otherwise, select Start»Settings»Control Panel and then double-click Add/Remove Programs.
- 3. In the Install/Uninstall tab, click **Install**. When the Run Installation Program window appears, click **Finish** and follow the onscreen instructions.
- 4. Insert your NI-Serial PCMCIA hardware.
- 5. Select Start»Programs»National Instruments»NI-Serial»Diagnostics.
- 6. The Serial Diagnostics Window appears. Click **Start** to run the diagnostics.
- Connect the cables.

PCMCIA Serial Installation for Windows NT

Refer to the *Serial Hardware and Software for Windows User Manual* (available on the CD) for more information about troubleshooting problems, configuring the hardware and software, programming requirements, and more.

- 1. Log on as Administrator or as a user with administrator privileges.
- 2. Insert the NI-Serial Software for Windows NT/Me/9x CD.
- If the NI-Serial setup starts automatically, follow the onscreen instructions and skip to step 5. Otherwise, select Start»Settings»Control Panel and then double-click Add/Remove Programs.
- In the Install/Uninstall tab, click Install. When the Run Installation Program window appears, click Finish and follow the onscreen instructions.
- Select Start»Settings»Control Panel. In the Control Panel window, double-click NIPorts.
- In the National Instruments—Ports Window, select your PCMCIA card type and click Add. Follow any onscreen instructions.
- 7. In the Resource Configuration dialog box, select nonconflicting base I/O address and IRQ settings for your port/card and click **OK**. For more information about selecting resources for your port/card, refer to the Serial Hardware and Software for Windows User Manual.
- Exit NIPorts. Remove the software CD. Power down the computer, insert your NI-Serial PCMCIA card, and then power on the computer.
- 9. Select Start»Programs»National Instruments»NI-Serial»Diagnostics.
- 10. The Serial Diagnostics Window appears. Click **Start** to run the diagnostics.
- 11. Connect the cables.

